
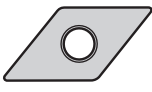



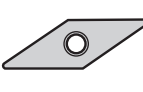
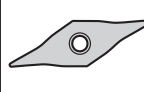
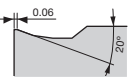

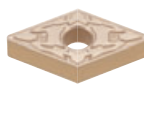










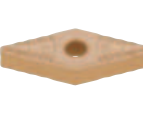
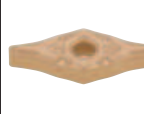
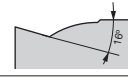







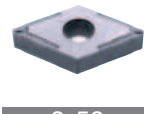


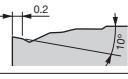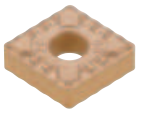
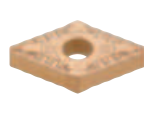












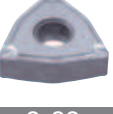
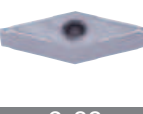


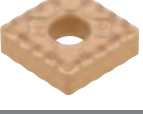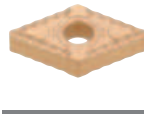


Базовые стружколомы с отрицательной геометрией

с отверстием

Применение	Стружколом	C	D	S	T	W	V	Y
	Отрицательные	 80° отрицательные	 55° отрицательные	 90° отрицательные	 60° отрицательные	 80° отрицательные	 35° отрицательные	 25° отрицательные
Чистовая обработка	CF (M) 	 2-43	 2-53	 2-62	 2-72	 2-81	 2-88	
	ZF (M) 	 2-43	 2-53	 2-62	 2-72	 2-81	 2-88	 2-91
	NS (M) 	 2-43	 2-53	 2-63	 2-72	 2-81		
	11 (M) 	 2-44	 2-53	 2-63	 2-72	 2-82	 2-88	
	AFW (M) 	 2-44				 2-81		
	ZM (M) 	 2-45	 2-54	 2-63	 2-73	 2-83	 2-88	 2-91
От чистовой до обработки на среднюю глубину	NM (M) 	 2-45	 2-55	 2-64	 2-73	 2-83		

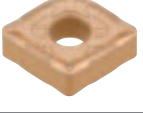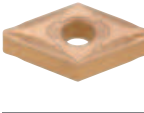2
Пластины ТАС