




CAB M-M

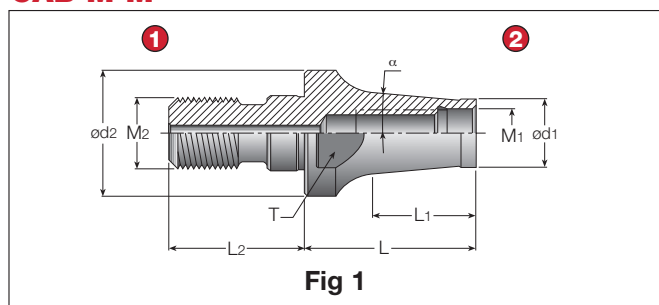

CAB-M-M-C

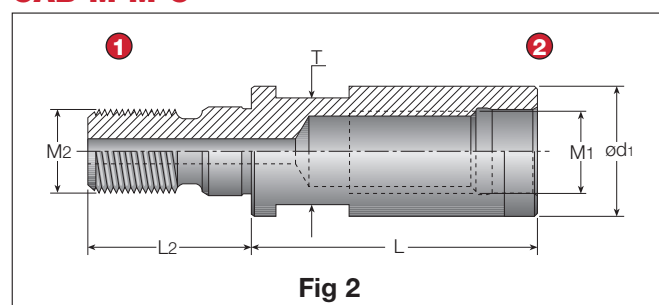

- 1 TungFlex
2 TungFlex




CAB M-M FLEX Переходники и удлинители

Кат. №	Размеры (mm)									Fig.
	M1	ød1	L	L1	M2	ød2	L2	T	α	
CABM06M06-C ⁽¹⁾	M6	9.8	25	-	M6	-	14.5	8.00	-	2
CABM06M08	M6	9.7	30	24.8	M8	13	17.5	9.50	5.7°	1
CABM08M08-C ⁽¹⁾	M8	13.0	30	-	M8	-	17.5	9.60	-	2
CABM08M10	M8	13.0	40	33.4	M10	18	20.0	15.00	5.2°	1
CABM10M10-C ⁽¹⁾	M10	18.0	35	-	M10	-	20.0	15.00	-	2
CABM10M10/15.8-C ⁽¹⁾	M10	15.8	35	-	M10	-	20.0	12.75	-	2
CABM10M12	M10	18.0	45	36.4	M12	21	22.0	17.00	2.5°	1
CABM12M12-C ⁽¹⁾	M12	21.0	40	-	M12	-	22.0	17.00	-	2
CABM12M16	M12	21.0	50	42.5	M16	29	25.0	25.00	6.3°	1
CABM16M16-C ⁽¹⁾	M16	29.0	40	-	M16	-	25.0	25.00	-	2

⁽¹⁾ С отверстиями для подачи СОЖ

VAD-M Переходники

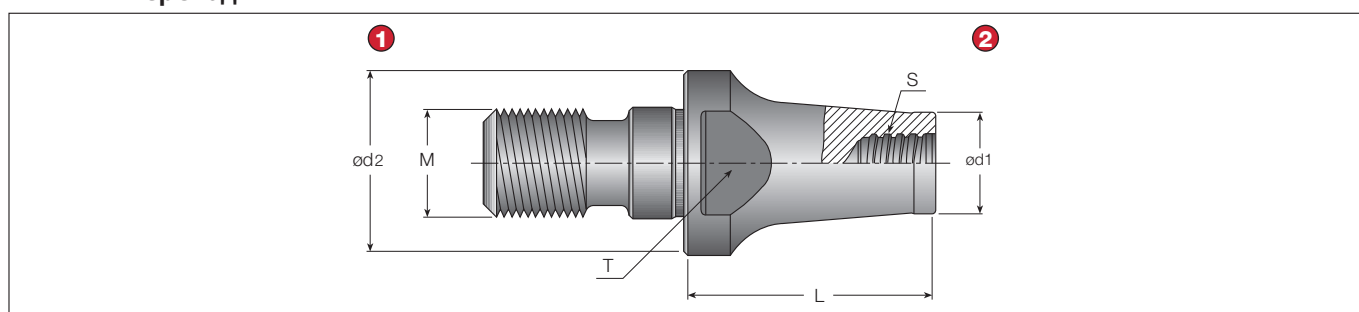

- 1 TungFlex
2 TungMeister

VAD-M Переходники

Кат. №	Размеры (mm)					
	S	L	ød1	ød2	M	T
VAD130L016S08-S-M8	S08	16	11.7	13.0	M8	11
VAD130L025S08-S-M8	S08	25	11.7	13.0	M8	11
VAD180L020S08-S-M10	S08	20	11.7	18.0	M10	13
VAD180L025S08-S-M10	S08	25	11.7	18.0	M10	11
VAD210L020S08-S-M12	S08	20	11.7	21.0	M12	12.75
VAD210L025S08-S-M12	S08	25	11.7	21.0	M12	12.75

Ключ заказывается отдельно.

Не используйте смазку на соединении с резьбой.